


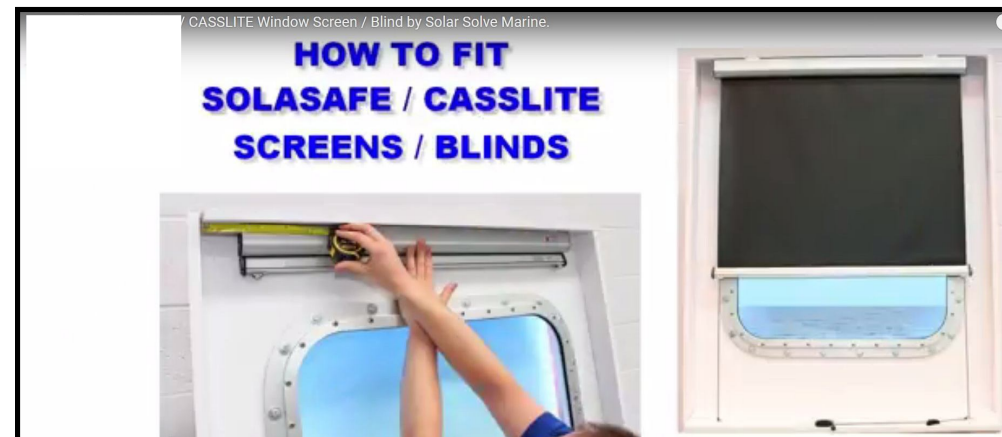

Scan here to watch our installation video or visit:
solasolv.com/installation-guides



Component Identification

Cord clamp 	Stainless Steel Cleat 	Clam Cleat
Stainless Steel Pulley 	Acorn 	Cord Holder
Leather Tab 	Turn Button 	Chain Safety Clip

Installation Instructions for SOLASOLV® SOLASAFE® Sunscreens & ROLASOLV® CASSLITE® Fabric Roller Blinds

FRAGILE-HANDLE WITH CARE

THE FILM WHICH FORMS THE SCREENS IS VERY FRAGILE AND THE UTMOST CARE SHOULD BE TAKEN WHEN FITTING THE SCREENS TO ENSURE THE FILM/FABRIC IS NOT DAMAGED.

Tools Required:

Tape measure, Pencil, Drill, Drill bits (2.5mm/3.3mm), PZ1 Screwdriver, PZ2 Screwdriver, Cutters (For Cord/Cable), Cassette remover (Included).



1. Decide exactly where the screen/blind is to be fitted, ensuring that:-

- The correct bracket type is to be used depending if the screen is to be **TOP**, **FACE** or **SIDE** fixed.
- The screen/blind will not interfere with window stays or any other obstructions when operated.
- The screen is absolutely level.



2.

The screen can now be fitted into the mounting brackets by firstly positioning the screen centrally and clicking into place. You will hear a definite click when the screen is correctly fitted.



3.

The screen can be removed using the cassette removal tool if required.



4. METHODS OF OPERATION

Depending upon your chosen operating system, installation will vary.
See below for correct installation method.

UP POSITION

DOWN POSITION

DOUBLE PULLEY BOTTOM RAIL OPERATION

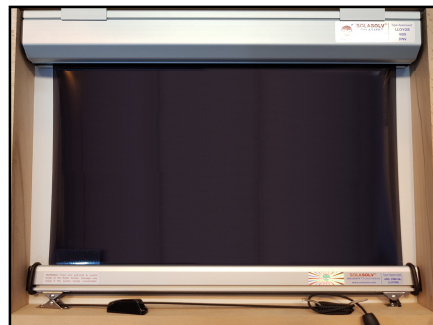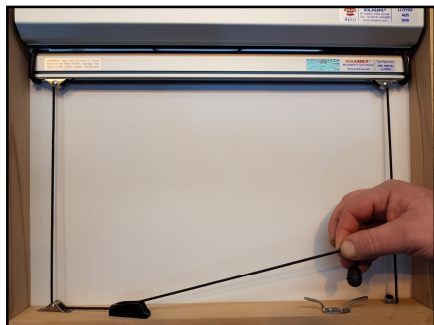


- Position cord clamp and pulley to ensure cord runs perpendicular.
- Position clam cleat in line with the pulley to ensure smooth operation.
- If required, cut cord to size and fit acorn.
- Position stainless cleat to tie up excess cord.

CONSTANT TENSION CENTRE PULL OPERATION



- Position pulley centrally.
- Position clam cleat in line with the pulley to ensure smooth operation.
- Attach cord to the bottom rail using the cord holder.
- If required, cut cord to size and fit acorn.
- Position stainless cleat to tie up excess cord.

SELF LOCK SPRING OPERATION

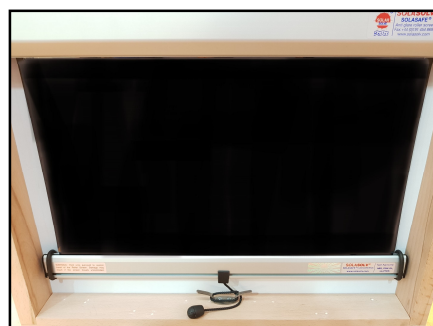

- Position stainless steel cleat centrally.
- Attach cord to the bottom rail using the cord holder.
- If required, cut cord to size and fit acorn.

SIDE CHAIN OPERATION



- Attach the chain safety clip and fix into place as shown.
- If leather tabs are used, fix turn button in line with eyelet.

5.

SUPPORT MECHANISMS (Optional)

SIDE CHANNELS

Side channels fit into curtain feed as shown.

Attach feet to the bottom of each channel and fix using supplied screws.


CABLE GUIDES

COMPLETED CABLE SYSTEM AS SEEN FROM BEHIND SCREEN

CABLE GUIDES

SLOPING BLIND INSTALLATION (Optional)

Plastic wedges or angle brackets are available to ensure a correct fit for sloped windows

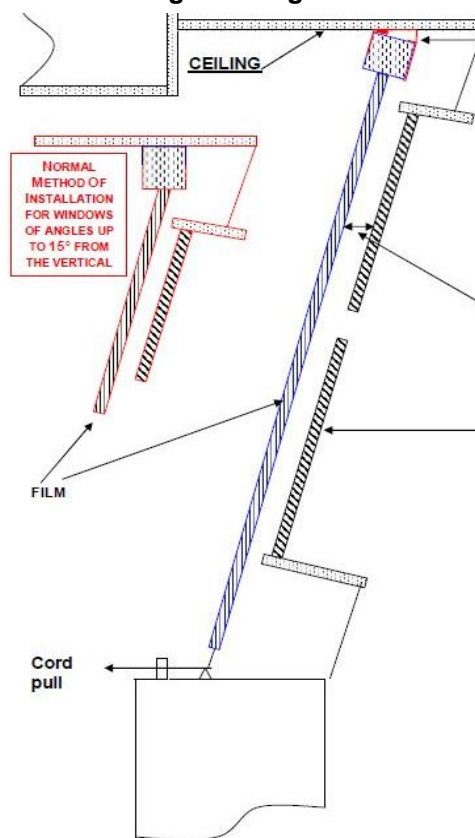

Angled Brackets are available to ensure a correct fit for sloping windows at 15 degrees from the vertical position.

Maintain minimum gap to ensure maximum heat reflection and screen efficiency.

Window glass.

- The anti-glare screen should follow the angle of the window inclination at all times, whenever practical.
- The installation of the screen should be as close as possible to the window glass.